


A. 25.615–30.105MHz 400cx faire un strap sur OP1

Channel/Power	frequency	band	Note
40CH AM/FM 4W	25.615–26.055MHz	AE	
40CH AM/FM 4W	26.065–26.505MHz	BE	
40CH AM/FM 4W	26.515–26.955MHz	CE	
40CH AM/FM 4W	26.965–27.405MHz	DE	Default
40CH AM/FM 4W	27.415–27.855MHz	EE	
40CH AM/FM 4W	27.865–28.305MHz	FE	
40CH AM/FM 4W	28.315–28.755MHz	GE	
40CH AM/FM 4W	28.765–29.205MHz	HE	
40CH AM/FM 4W	29.215–29.655MHz	IE	
40CH AM/FM 4W	29.665–30.105MHz	LE	

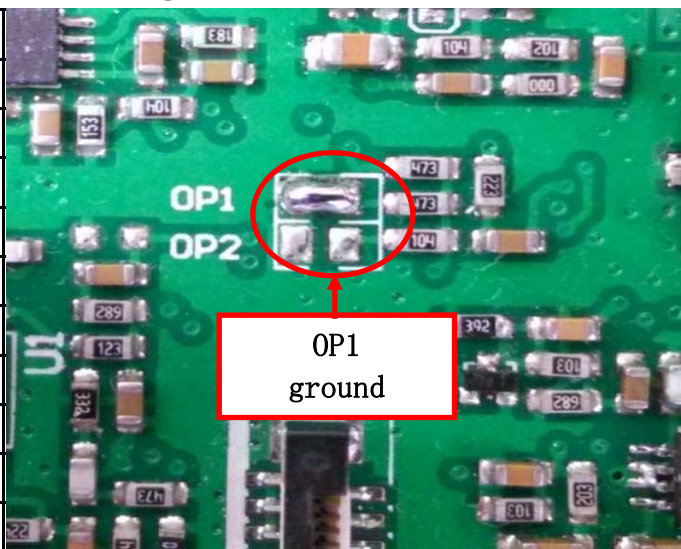


1. modification de puissance . Maintenir la touche PTT plus la touche RFG en allumant la radio, choisir la puissance avec les touches UP/DN du microphone, PL pour petite , PH pour haute, éteindre et rallumer la radio .un H apparait en grande puissance.

2 Pour activer la fonction -5KHz: Maintenir la touche RFG plus de 2 secondes. l'afficheur indique "P", La fréquence se termine alors par 0 . répéter l'opération pour revenir en terminaison 5.

B. 28.000–29.700MHz 10 metre Ameteur bande strap sur OP2

Channel/Power	frequency	band	Note
40CH AM/FM 4W	28.000–28.195MHz	HA	
40CH AM/FM 4W	28.200–28.395MHz	HB	
40CH AM/FM 4W	28.400–28.595MHz	HC	
40CH AM/FM 4W	28.600–28.795MHz	HD	Default
40CH AM/FM 4W	28.800–28.995MHz	HE	
40CH AM/FM 4W	29.000–29.195MHz	HF	
40CH AM/FM 4W	29.200–29.395MHz	HG	
40CH AM/FM 4W	29.400–29.595MHz	HH	
20CH AM/FM 4W	29.600–29.695MHz	HI	

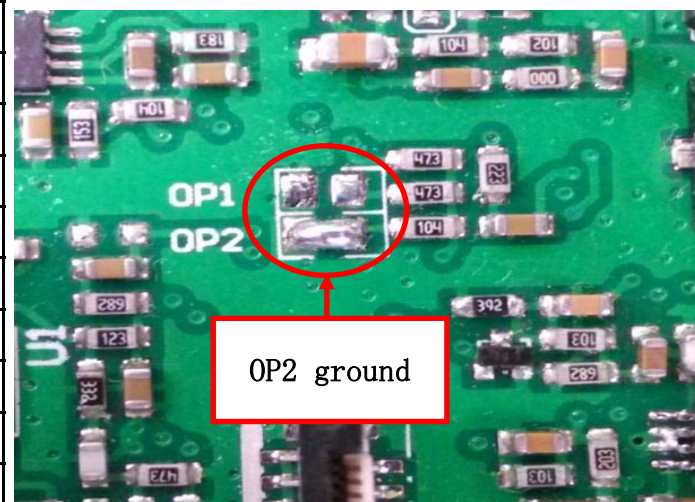

1. H/L power function : Hold PTT + RFG key to power on, press microphone UP/DN key to choose power level , PL stand for Low power, PH stand for high power, re-power on to store it.

2. -5KHz function: hold RFG for over 2 seconds to turn on -5KHz function, LCD displays "P", the frequency end with 0, Hold RFG again for 2 seconds to turn off -5KHz, the LCD display "E", frequency end with 5.

C. Normal CB band mode( Default mode)

Channel/Power	frequency	band	Note
40CH AM/FM 4W	26.965-27.405MHz	EU	Default
40CH FM 4W	26.965-27.405MHz	CE	
40CH FM 4W	27.60125-27.99125MHz	UK	
40CH AM/FM 4W	26.960-27.400MHz	PL	
36CH AM/FM 4W	26.965-26.865MHz	I2	
40CH AM/FM 4W	26.965-27.405MHz	DE	
80CH FM 4W	26.565-26.955MHz		
27CH AM/FM 4W	26.965-27.275MHz	IN	

