


Frequency band	SEL1	SEL2
80 FM/12 AM	short	short
40 FM/40 AM	short	open
40 FM only	open	short

SEL1 and SEL2 are the jumper location on the PCB

As you can see from the above table, it is simple to change the frequency from 80 FM/12 AM to 40 FM/40 AM. You just need to cut the SEL2 jumper and keep this jumper open.

For your convenience, please find hereafter the PCB layout of CB 2010. We show the jumper SEL1 and SEL2 location respectively

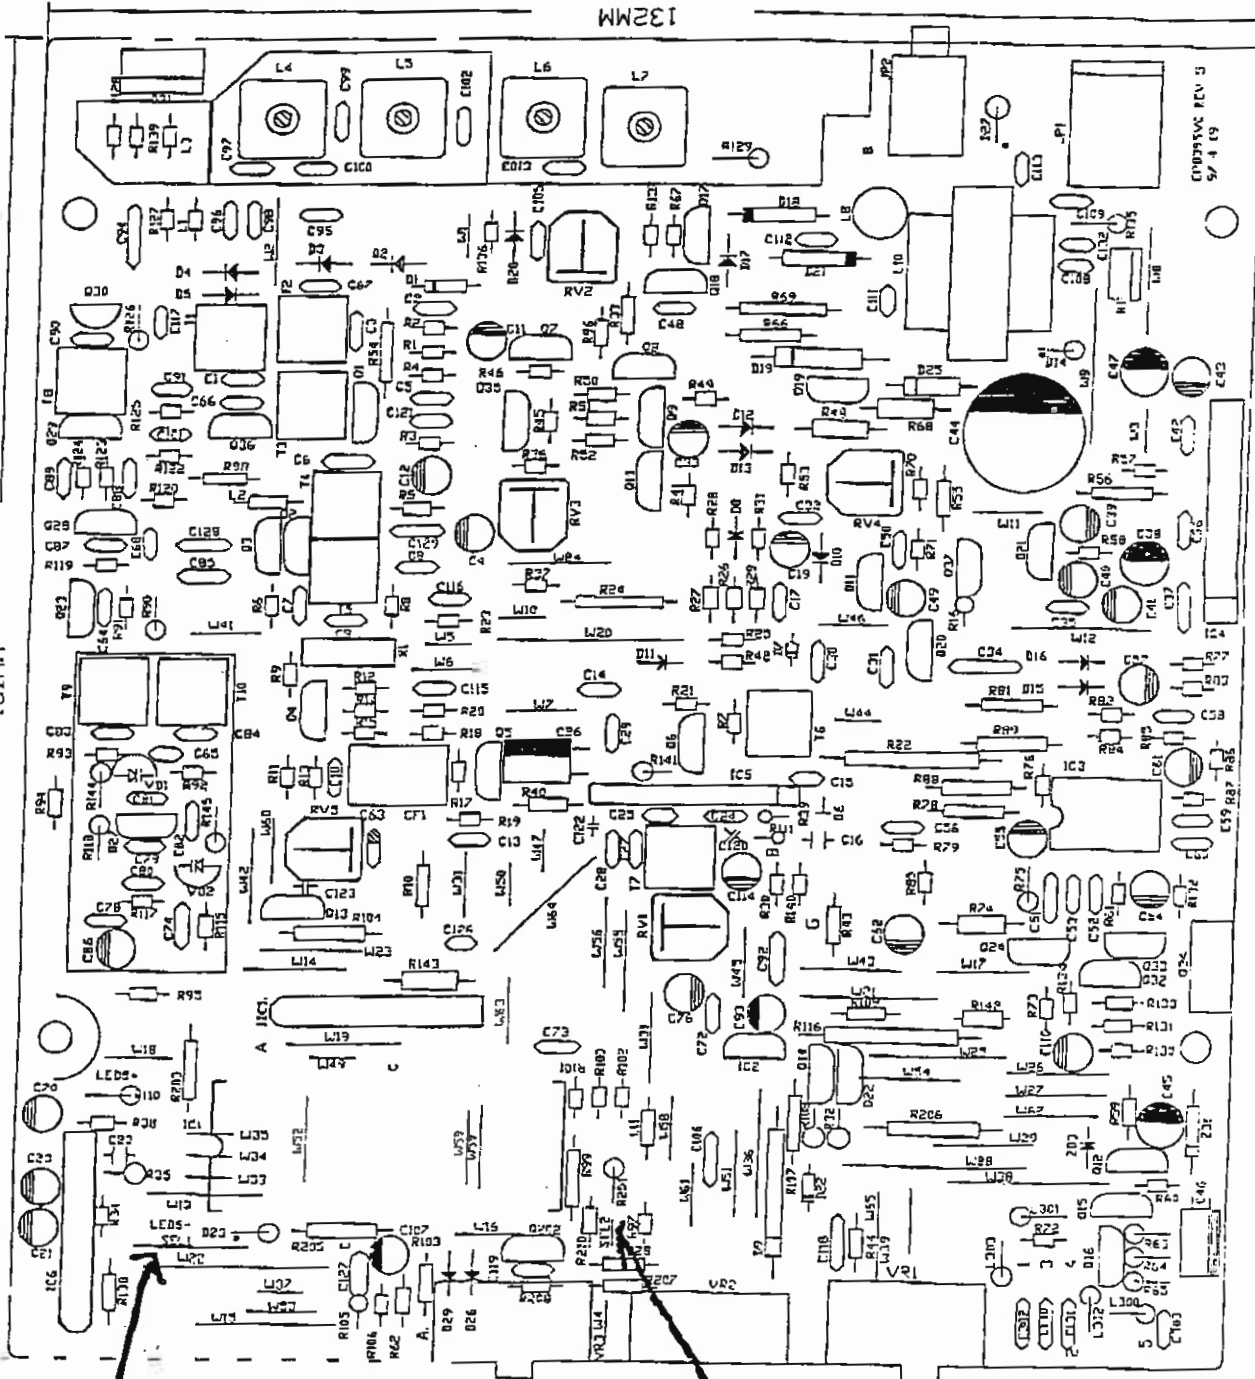

CB2010 Main Board PCB

Jumper SEL1

Jumper SEL2

op Overlay