


danita 608

System change:

Under the battery cover is a black tape. Remove it. Now you see a space for 3 JUMPS. By changing/adding/removing JUMPS the danita 608 will convert to the following systems according to the jump codes specified below:

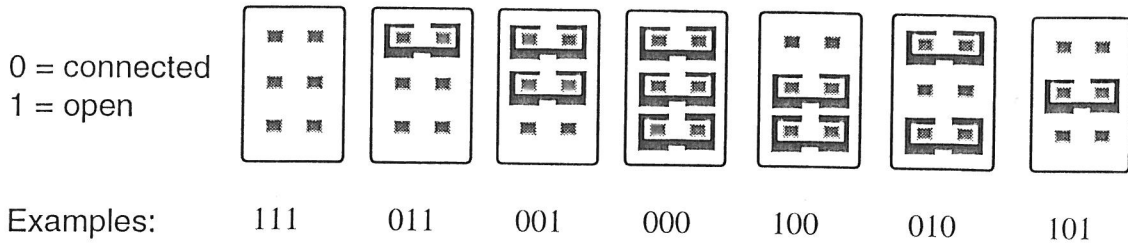

Jump code: System:

111	40-CH CEPT, 40-CH UK MPT1382
011	40-CH UK MPT1382
101	240-CH FM/AM
110	40-CH CEPT, 40-CH AM CEPT
001	80-CH FM GERMAN, 12-CH AM GERMAN
100	80-CH GERMAN
010	SWEDISH
000	40-CH FM CEPT

Systems:

40-CH CEPT =	26,965 - 27,402 MHz
80-CH GERMAN =	1-40 = CEPT, 41-80 = 26,565 - 26,955 MHz
240-CH IN 6 BANDS =	A 25,615 - 26,055 MHz B 26,065 - 26,505 MHz C 26,515 - 26,955 MHz D 26,965 - 27,405 MHz E 27,415 - 27,855 MHz F 27,865 - 28,305 MHz
40-CH UK MPT1382 =	27,601.25 - 27,991.25 MHz